

AIR INTAKE SYSTEM (J08E)

EN03-001

AIR INTAKE MANIFOLD AND PIPE EN03-2

COMPONENT LOCATOR..... EN03-2

DISMOUNTING AND MOUNTING EN03-3

AIR INTAKE EN03-4

COMPONENT LOCATOR..... EN03-4

AIR CLEANER EN03-5

DESCRIPTION EN03-5

OVERHAUL EN03-6

AIR HOSE EN03-7

COMPONENT LOCATOR..... EN03-7

OVERHAUL EN03-8

AIR FLOW SENSOR EN03-9

COMPONENT LOCATOR..... EN03-9

REPLACEMENT EN03-10

BOOST PRESSURE SENSOR EN03-11

COMPONENT LOCATOR..... EN03-11

REPLACEMENT EN03-12