

# COOLING SYSTEM (J08E)

EN06-001

**COOLING SYSTEM ..... EN06-2**

DIAGRAM ..... EN06-2

**COOLANT PUMP ..... EN06-3**

COMPONENT LOCATOR..... EN06-3

**THERMOSTAT ..... EN06-4**

COMPONENT LOCATOR..... EN06-4

OVERHAUL ..... EN06-5

**RADIATOR AND INTERCOOLER ..... EN06-7**

COMPONENT LOCATOR..... EN06-7

OVERHAUL ..... EN06-7

**RADIATOR ..... EN06-9**

COMPONENT LOCATOR..... EN06-9

SPECIAL TOOL ..... EN06-10

OVERHAUL ..... EN06-10

INSPECTION AND REPAIR ..... EN06-14

**COOLING FAN ..... EN06-15**

COMPONENT LOCATOR..... EN06-15

INSPECTION AND REPAIR ..... EN06-16