

ENGINE CONTROL (J08E)

EN16-001

ACCELERATOR PEDAL..... EN16-2

DESCRIPTION EN16-2

ENGINE ECU EN16-3

COMPONENT LOCATOR..... EN16-3

REPLACEMENT EN16-4