

EXHAUST SYSTEM (J08E)

EN04-001

EXHAUST MANIFOLD AND PIPE..... EN04-2

COMPONENT LOCATOR..... EN04-2
DISMOUNTING AND MOUNTING EN04-3

EXHAUST PIPE AND MUFFLER UNIT EN04-4

DESCRIPTION EN04-4
COMPONENT LOCATOR..... EN04-5
OVERHAUL EN04-11

DPR (DIESEL PARTICULATE**REDUCTION SYSTEM) EN04-22**

SYSTEM CONFIGURATION EN04-22
STRUCTURE OF DPR-CLEANER EN04-23
DPR MAINTENANCE EN04-24
DPR INSPECTION EN04-24
INSPECTION PROCEDURE FOLLOWED
WHEN "DPR MAINTENANCE" IS
DISPLAYED ON THE INFORMATION
DISPLAY EN04-25
INSPECTION BY WAY OF HINO-DX EN04-26
INSPECTION PROCEDURE FOLLOWED
WHEN CHECK ENGINE LIGHT
ILLUMINATES (ABNORMAL) EN04-30
DETERMINATION BY WAY OF DPR STATE
DETERMINATION MONITOR OF HINO-DX . EN04-33
CHECKING THE DPR STATE EN04-33
REPLACEMENT OF DPR FILTER EN04-34
OVERALL OPERATION FLOW EN04-38

DIFFERENTIAL PRESSURE SENSOR.. EN04-46

COMPONENT LOCATOR..... EN04-46
DISMOUNTING AND MOUNTING EN04-47

EXHAUST CONTROL CYLINDER..... EN04-50

SYSTEM CONFIGURATION EN04-50
DPR INSPECTION CHECK SHEET..... EN04-51