

# STARTER (J08E)

EN12-001

|                               |               |
|-------------------------------|---------------|
| <b>STARTER .....</b>          | <b>EN12-2</b> |
| DATA AND SPECIFICATIONS ..... | EN12-2        |
| DESCRIPTION .....             | EN12-2        |
| TROUBLESHOOTING .....         | EN12-3        |
| COMPONENT LOCATOR.....        | EN12-4        |
| OVERHAUL .....                | EN12-5        |
| INSPECTION AND REPAIR .....   | EN12-9        |

